

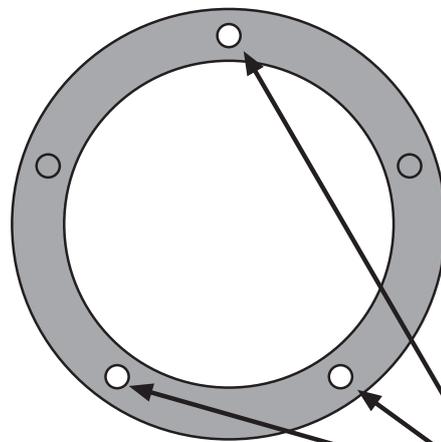


BF35_BF35K

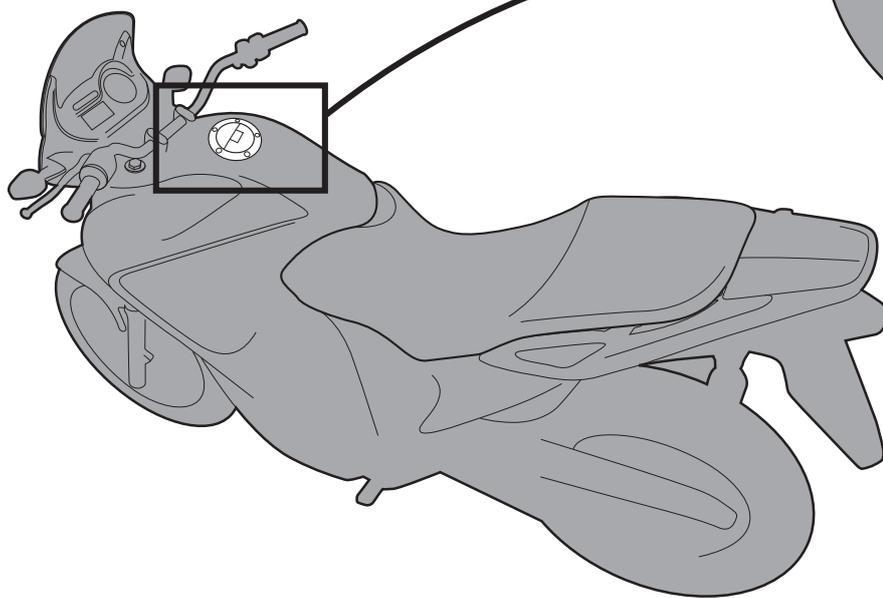

Demontujte pôvodné skrutky
Remove the original screws
Enlevez les vis originales
Entfernen Sie die Originalschrauben
Mover los tornillos originales

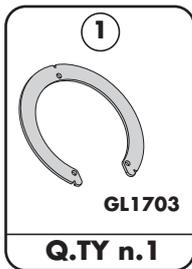