










TE2110 - TE2110K

ŠPECIÁLNY RÚRKOVÝ NOSIČ PRE BRAŠŇE - TELAETTO LATERALE SPECIFICO - SPECIFIC SADDLEBAG TUBULAR HOLDER - SUPPORT TUBULAIRE POUR SACOCHES CAVALIÈRES -
SPEZIAL SEITENTRAEGER FUER WEICHTASCHEN - PORTA ALFORJAS TUBULAR LATERAL - SUPORTE LATERAL DE ALFORGES

YAMAHA

XJ6 600

(2013)

Číslo	Popis	Rozmery	Kód	Množstvo	
1	Držiak - Supporto - Support Halteung - Soporte	-	-	2 (Dx,Sx)	
2	Most - Ponte - Bridge - Pont Ungsrohr - Puente Ponte	-	-	1	
3	Skrutka - Vite - Screw Vis - Schraube Tornillo - Parafuso	TEF M6x16	616TEF	2	
4	Skrutka - Vite - Screw Vis - Schraube Tornillo - Parafuso	TBEI M8x50	850TBEI	2	
5	Skrutka - Vite - Screw Vis - Schraube Tornillo - Parafuso	TCEI M8x50	850TCE	2	
6	Podložka - Rondella - Washer Rondelle - Scheibe Arandela - Arruela	Ø8x14	814RON	2	
7	Matica - Dado - Bolt - Ecrou Mutter - Tuerca - Porca	Auto Bloccante Flangiato M6	6DADIABFN	2	
8	Matica - Dado - Bolt - Ecrou Mutter - Tuerca - Porca	Auto Bloccante Flangiato M8	8DADIFN	2	
9	Komponenty zahrnuté v montážnej sade 2110FZ Components Included In The Fitting Kit Of The 2110FZ Pièces Inclues Dans Le Kit De Vis Del 2110FZ Die Einzelnen Teile Sind Bei Montagekit Der 2110FZ Despieces Incluidos En El Kit De Anclajes Del 2110FZ Explodiu incluido no Kit as âncoras da 2110FZ	-	-	-	-
10	Komponenty zahrnuté v prídavnej montážnej sade Components Included In The Additional Fitting Kit Pièces Inclues Dans Le Kit De Vis Additionnel Die Einzelnen Teile Sind Bei Zusatlichem Montagekit Enthalten Detalles Incluido en Kit Detalhes adicionais incluídos na Kit	-	-	-	-
11	Uzáver skrutky - Copriforo - Bolt Cap Cache Trou - Stopslock Tapa Agujero - Tampa do Orificio	Ø8	Z801	2	


TE2110 - TE2110K

ŠPECIÁLNY RÚRKOVÝ NOSIČ PRE BRAŠNE - TELAIETTO LATERALE SPECIFICO - SPECIFIC SADDLEBAG TUBULAR HOLDER - SUPPORT TUBULAIRE POUR SACOCHES CAVALIÈRES -
SPEZIAL SEITENTRAEGER FUER WEICHTASCHEN - PORTA ALFORJAS TUBULAR LATERAL - SUPORTE LATERAL DE ALFORGES

YAMAHA

XJ6 600

(2013)

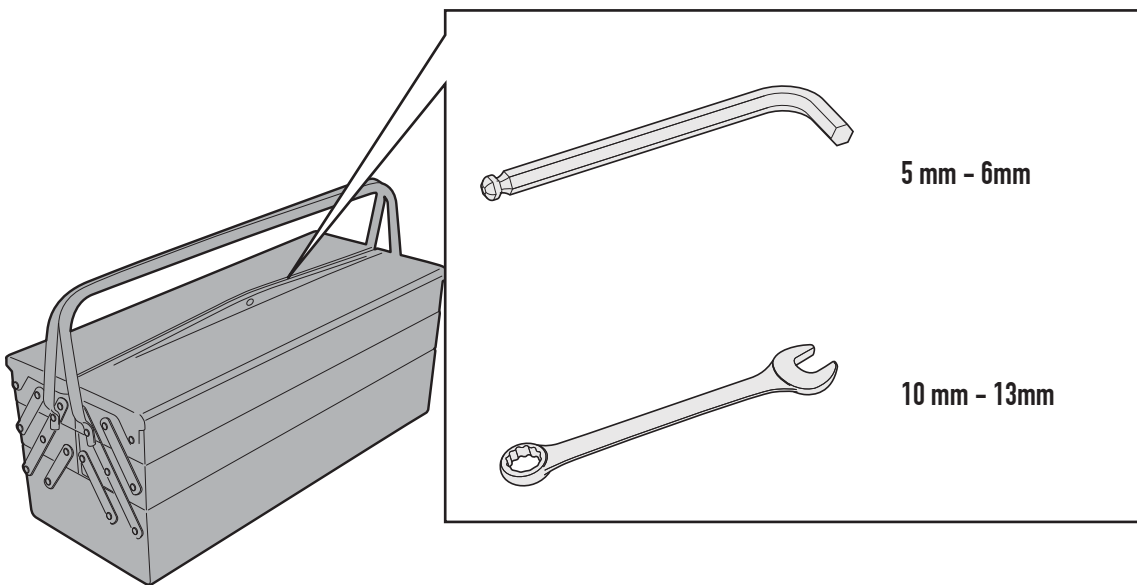


TE2110 - TE2110K

ŠPECIÁLNY RÚRKOVÝ NOSIČ PRE BRAŠNE - TELAIETTO LATERALE SPECIFICO - SPECIFIC SADDLEBAG TUBULAR HOLDER - SUPPORT TUBULAIRE POUR SACOCHES CAVALIÈRES -
SPEZIAL SEITENTRAEGER FUER WEICHTASCHEN - PORTA ALFORJAS TUBULAR LATERAL - SUPORTE LATERAL DE ALFORGES


YAMAHA

XJ6 600

(2013)

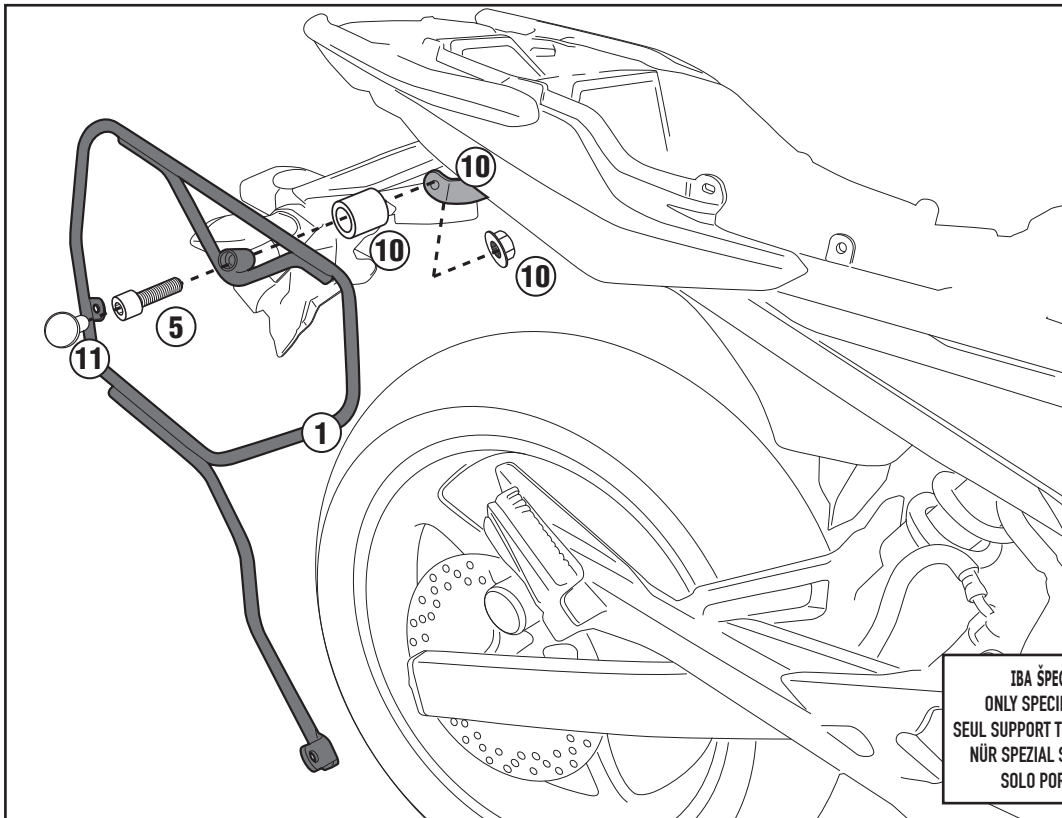

IBA ŠPECIÁLNY RÚRKOVÝ NOSIČ NA BRAŠNE
ONLY SPECIFIC SADDLEBAGS TUBULAR HOLDER
SEUL SUPPORT TUBULAIRE POUR SACOCHES CAVALIÈRES
NÜR SPEZIAL STAHLROHR-SEITENKOFFER-TRAEGER
SOLO PORTA ALFORJAS TUBULAR LATERAL

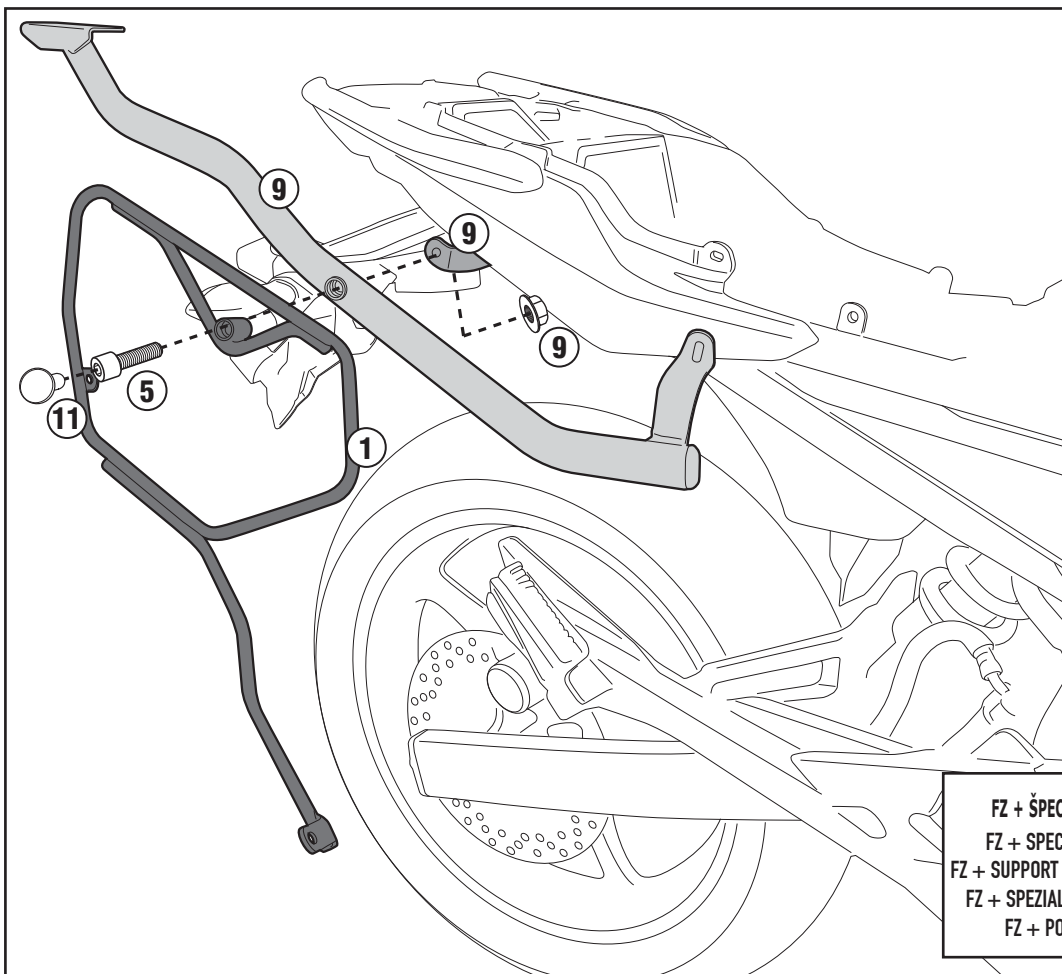

FZ + ŠPECIÁLNY RÚRKOVÝ NOSIČ NA BRAŠNE
FZ + SPECIFIC SADDLEBAGS TUBULAR HOLDER
FZ + SUPPORT TUBULAIRE POUR SACOCHES CAVALIÈRES
FZ + SPEZIAL STAHLROHR-SEITENKOFFER-TRAEGER
FZ + PORTA ALFORJAS TUBULAR LATERAL



TE2110 - TE2110K

ŠPECIÁLNY RÚRKOVÝ NOSIČ PRE BRAŠNE - TELAIETTO LATERALE SPECIFICO - SPECIFIC SADDLEBAG TUBULAR HOLDER - SUPPORT TUBULAIRE POUR SACOCHES CAVALIÈRES -
SPEZIAL SEITENTRAEGER FUER WEICHTASCHEN - PORTA ALFORJAS TUBULAR LATERAL - SUPORTE LATERAL DE ALFORGES

YAMAHA

XJ6 600

(2013)

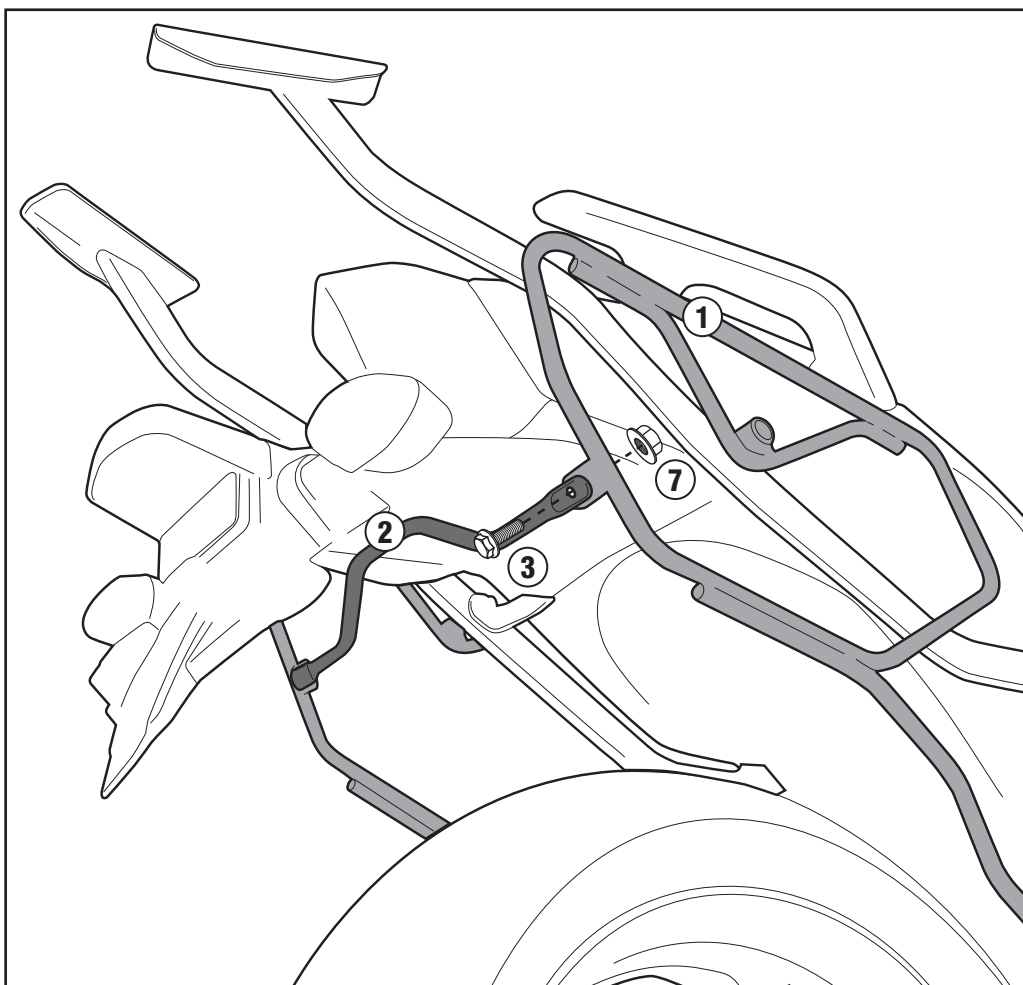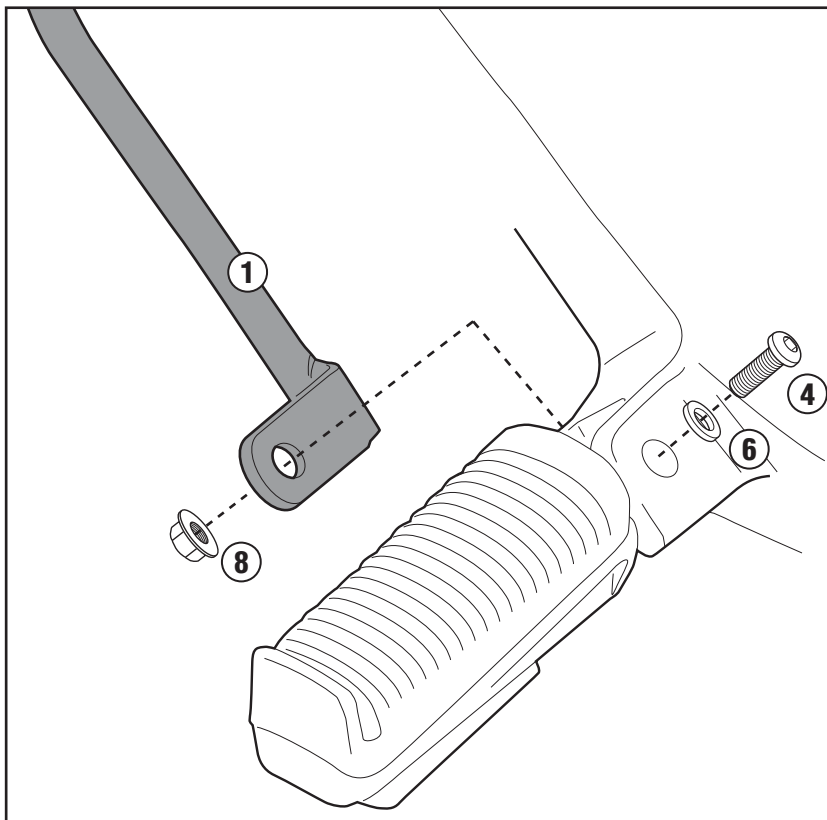

MONTÁŽNY NÁVOD - INSTRUZIONI DI MONTAGGIO - MOUNTING INSTRUCTIONS
INSTRUCTIONS DE MONTAGE - BAUANLEITUNG
INSTRUCCIONES DE MONTAJE - INSTRUÇÕES DE MONTAGEM